



SINOAFRICA MEDICAL DEVICES COMPANY LTD.

Sino Africa Medical Devices Co., Ltd UNET G3 LN DOL for LLIN

Label printed on bag:

*Products may be individually packaged or baled as “naked” nets. When distributed as “naked” nets, leaflets containing the same information as the printed on the standard polybag maybe distributed concurrently at the decision of the purchaser.

1. Product Identification

Product name: UNET G3 LN

This product is a long lasting insecticidal net (LLIN).

Manufactured by:

Sino Africa Medical Devices Co., Ltd

Plot 27-31, Second Ring Road, Luzira Industrial Park, Kampala, Uganda

Tel: + 256 763 494269

Email: info@smd.co.ug

Manufacturing Site Address:

Yorkool Chemicals (Cangzhou) Co., Ltd.

Lixian sub-factory

Yangnan Village, Sangyuan Town,

Lixian County, Baoding City,

Hebei Province, China

Sino Africa Medical Devices Co., Ltd

Plot 27-31, Second Ring Road, Luzira

Industrial Park, Kampala, Uganda

Distributed by:

Sino Africa Medical Devices Co., Ltd

Plot 27-31, Second Ring Road, Luzira Industrial Park, Kampala, Uganda

Tel: +256 763 494269


Email: info@smd.co.ug



SINOAFRICA MEDICAL DEVICES COMPANY LTD.

Lot/Batch number:

ID 3 26 08 1

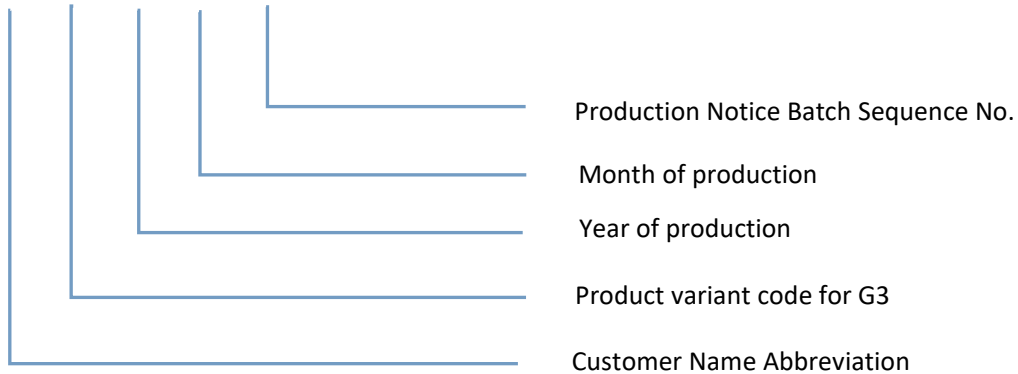

The production batch number for UNET G3 LN products is structured as follows: **Customer Name Abbreviation + the numeral 3 representing the product variant G3 + Year of production + Month + Production Notice Sequence Number.**

Example: "ID326081" represents the first production batch of UNET G3 LN products in Aug 2026, where "ID" stands for the customer's name abbreviation.

For the same production notice (i.e., the same contract), the batch numbers will continue as 1, 2, 3, etc.

Country of Origin: Uganda

Product versions: 130 Denier

Colors: White, blue, green, other colors available upon request

Rectangular (L×W×H)

160×180×150	180×130×150
190×180×150	160×180×200
190×180×160	200×180×180
190×180×170	190×180×180

Other sizes available upon request

Conical (circumference×ring diameter×height cm) *



SINOAFRICA MEDICAL DEVICES COMPANY LTD.

1250 × 65 × 250

1050 × 56 × 220

850 × 56 × 220

1350 × 75 × 250

Material: 100% polyethelene

Mesh size – Average 17 holes per cm², Min. 16 holes per cm²

2. Ingredient Statement

Active ingredient: Deltamethrin CAS # 52918-63-5

The deltamethrin content shall be declared 3.0 g/kg for 130 denier and, when determined, the average measured content shall not differ from that declared by more than ± 25%.

Active Ingredient deltamethrin is a pyrethroid in IRAC Group 3A.

Synergist: Piperonyl butoxide CAS # 51-03-6

The piperonyl butoxide content shall be declared 11.0 g/kg for 130 denier and, when determined, the average measured content shall not differ from that declared by more than ± 25%

3. Safety

Only use the product for its intended purpose. Do not use this product for other purposes such as fishing or as clothing.

Dispose of the empty bag by burying it, or as household waste. Dispose of the used bed net as per local regulatory guidelines.

4. Directions for Use

- Unpack the bag, check the net and the accessories (if ordered).
- Place the hooks on the ceiling and tie the loops onto the hooks.
- Hang the net low enough to touch the floor in order to cover the bed completely.
- UNET G3 LN has been shown to perform up to 20 washes.
- After washing, hang out your net to dry in the shade. DO NOT hang out your LLIN under direct sunlight.


5. Standard pictograms for washing

- Wash generally with tepid water
- Do not bleach
- Do not tumble dry
- Do not Iron
- Do not dry clean



SINOAFRICA MEDICAL DEVICES COMPANY LTD.

- Dry in shade

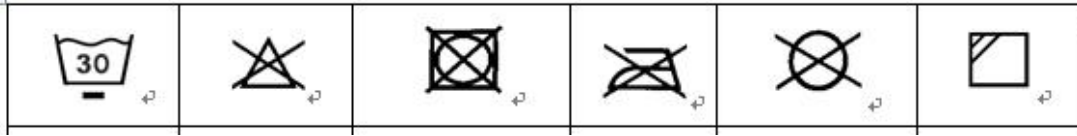

6. Precautionary instructions for use and storage

- Always keep your LLIN out of direct sunlight.
- Handle with care.
- To be stored in dry ventilated place under normal indoor temperature.
- Without open storage.

7. Product Claims

- Easy to use
- Suitable for adults, children and infants
- Long lasting insecticidal net (LLIN)
- The expected lifetime of the product is 20 washes (appx 3 years) when used as recommended
- Made from 100% polyethylene provide high value and high comfort
- UNET G3 LN is a trademark of Sino Africa Medical Devices Co., Ltd



SINOAFRICA MEDICAL DEVICES COMPANY LTD.

Label tag sewn onto product:

1. Product Identification

Product: UNET G3 LN

Fabric composition: 100% warp knitted polyethylene, 130 denier

Insecticide and dose: 3.0 g/kg Deltamethrin + 11.0 g/kg Piperonyl butoxide

Dimension: 180Lx130Wx150H (cm), other sizes available upon request

Manufacturer's name: Sino Africa Medical Devices Co., Ltd

Manufacturer's address: Plot 27-31, Second Ring Road, Luzira Industrial Park, Kampala, Uganda

Country of manufacture: Uganda

Batch number: AS defined above (i.e. ID326081)

Date of Manufacture: Month Year

2. Ingredient Statement

Deltamethrin CAS # 52918-63-5

Piperonyl butoxide CAS # 51-03-6

130D – 120mg/m² Deltamethrin + 440mg/m² Piperonyl butoxide which is equal to 3.0g/kg

deltamethrin + 11.0g/kg piperonyl butoxide.

3. Safety

Not applicable

4. Direction to use

- Avoid frequent wash
 - Wash gently
 - Avoid exposure to sun
 - Dry in the shade or indoors
 - To be stored under normal indoor temperature
-
- Gentle wash at no more than 30°C
 - No bleaching
 - No use of drying machine
 - No ironing
 - No dry cleaning

5. Product Claims

Not applicable