

Declaration of labelling

*Label printed on the bag in which the LLIN is supplied**

*The LLIN may be packed individually in bags and baled in PE woven sacks or baled without bags. When the LLIN is distributed without bag, leaflets containing the same information as printed on the bag will be supplied with the LLIN for concurrent distribution.

Product Identification

Product name: **Reliefnet®Reverte®**

Other names: Not applicable

“LONG LASTING INSECTICIDE INCORPORATED MOSQUITO NET”

Manufactured by:

Real Relief Health

Essen 26

6000 Kolding Denmark

T +45 7556 1650

E info@realreliefway.com

www.realreliefway.com

Batch number: [Site code]-[UniqueID]-[PO No.] ex. “01-230519-110345”

Date of manufacture: ex. “JUL 19”

Country of origin: China

Mesh (HOLES PER INCH²/CM²) 116/18

Material: 100% Polyethylene

Material weight: 34 g/m²

Flammability (EN 1102:2016): Non-flammable

Product versions

Ex.:

SHAPE: RECTANGULAR	SHAPE: RECTANGULAR	SHAPE: CIRCULAR
■ 70W X 180L X 150H cm	160W X 180L X 150H cm	● 850C X 220H X 56D cm
■ 100W X 180L X 150H cm	160W X 180L X 170H cm	● 1050C X 220H X 56D cm
■ 130W X 180L X 150H cm	190W X 180L X 150H cm	● 1250C X 250H X 65D cm
■ 130W X 180L X 170H cm	190W X 180L X 170H cm	

1. Ingredient statement

Deltamethrin (1,8 g/kg; 61 mg/m²) CAS 52918-63-5






Classification: IRAC group 3A, Pyrethroid

2. Safety

Dispose of this bag as household waste. Dispose of the used net as per local regulatory guidelines. The net is oxo-biodegradable and will decompose in nature if left in the open under sunlight exposure.

Only use the product for its intended purpose. Do not use this product for other purposes such as fishing or as clothing.

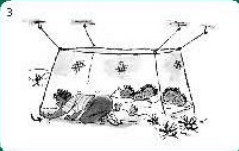3. Directions for use

	<p>EN: Ventilate your Reliefnet Reverte outdoors in the shade for 24 hours before first time use.</p> <p>FR: Avant la première utilisation, aérez à l'ombre votre Reliefnet Reverte de hors pendant 24 heures.</p> <p>ES: Ventile su Reliefnet Reverte en la sombra al aire libre 24 horas antes del primer uso.</p> <p>PT: Ateja o seu Reliefnet Reverte na sombra ao ar livre durante 24 horas antes da primeira utilização.</p>
	<p>EN: Hang your Reliefnet Reverte properly over the sleeping place using strings and hooks.</p> <p>FR: Accrochez votre Reliefnet Reverte correctement au-dessus du lit à l'aide des crochets et des ficelles fournis.</p> <p>ES: Cuelge su Reliefnet Reverte correctamente sobre su cama o colchón usando cadenas y ganchos.</p> <p>PT: Pendure o seu Reliefnet Reverte correctamente no lugar em que vai dormir – utilizando cordas e ganchos.</p>
	<p>EN: Tuck your Reliefnet Reverte carefully under the mattress before going to sleep.</p> <p>FR: Bordered votre Reliefnet Reverte soigneusement sous le matelas avant de vous coucher.</p> <p>ES: Mete su Reliefnet Reverte cuidadosamente bajo el colchón antes de ir a dormir.</p> <p>PT: Pranda o seu Reliefnet Reverte por baixo da cama/colchão antes de se deitar.</p>
	<p>EN: Keep your Reliefnet Reverte hanging during the day.</p> <p>FR: Laissez votre Reliefnet Reverte accrochée même dans la journée.</p> <p>ES: Mantenga su Reliefnet Reverte colgando durante el día.</p> <p>PT: Mantenha o seu Reliefnet Reverte pendurado durante o dia.</p>
	<p>EN: Wash your Reliefnet Reverte in a bowl. Do not use bleach. Do not wash in a river or lake.</p> <p>FR: Lavez Reliefnet Reverte dans une cuve et jamais dans une rivière ou dans un lac. N'utilisez pas d'eau de javel.</p> <p>ES: Lave su Reliefnet Reverte en un tazón. No utilice lejía. No lavar en un río o lago.</p> <p>PT: Lave o seu Reliefnet Reverte em um recipiente. Não use lixívia – nem o lave em rios ou lagos.</p>



- Gentle wash at no more than 30°C.
- No bleaching.
- No use of drying machine.
- No ironing.
- No dry cleaning.

- Laver avec précaution et pas à plus de 30°C.
- Ne pas utiliser d'eau de Javel.
- Ne pas utiliser de machine à sécher le linge.
- Ne pas repasser.
- Pas de nettoyage à sec.

- Lavado suave en no más de 30 grados.
- No blanqueado.
- No uso de secadora.
- No planchar.
- No limpieza en seco.

- Deve ser lavado suavemente, abaixo dos 30°C.
- Não utilize lixívia.
- Não utilize máquina de secar.
- Não passar a ferro.
- Não limpe a seco.

Hang the LLIN to dry in a shaded area. Do not dry in direct sunlight.

Care:

To extend the life of the LLIN; Hang and store the product with care away from food, to prevent damage from rodents. Keep the LLIN away from open flames or sparks.

4. Product claims

- Reliefnet® Reverte® is a long lasting insecticide treated mosquito net. The insecticide, Deltamethrin, is incorporated in the fiber during the yarn-making process. It has the ability to migrate to the surface of the yarns through a controlled release system, making Reliefnet Reverte an efficient tool to kill mosquitoes.
- The majority of the Deltamethrin is located inside the yarn.
- The expected useful lifetime of Reliefnet® Reverte® is 20 washes or 3 years when used as recommended.

5. Disposal and storage

- Reliefnet® Reverte® is an Oxo- biodegradable LLIN which, after its useful life as a vector control product, if left in the environment, it will degrade relatively faster than an LLIN which does not contain the pro-degradant additive and in such a way that the degraded product becomes bio-available.
- Shelf life of Reliefnet Reverte in unbroken packaging is 2 years. Please store the product in a dry place and as cool as possible. Avoid storage above 50°C for prolonged periods

Label tag sewn onto the product

1. Product identification



Manufacturer:

Real Relief Health

www.realreliefway.com

Month of production: ex.: "JUL 19"

Production code: ex.: "01-230519-110345"

Country of origin: China

Composition: 100% Polyethylene

Size: ex. 160W x 180L x 150H cm

Mesh: 116 holes/inch²

2. Ingredient statement

Deltamethrin 1,8 g/kg, 61 mg/m²

3. Safety


Only use the net for its intended purpose. Do not use this net for other purposes such as fishing or clothing.

4. Direction for use

Wash counter box:

No of washes:

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20



- Gentle wash at no more than 30°C
- No bleaching
- No use of drying machine
- No ironing
- No dry cleaning

Avoid frequent washing, but if required, wash gently and do not do bleaching.